

FITTING RSI UPSTAND ACCESS COVERS

1. Check structural opening size with clear opening size of access cover.
2. Place Upstand Cover in position and fix. You may wish to use a silicon sealant to get it water tight.
3. It is important that you do not try to open the lid before being securely fastened down as the frame may open very fast.
4. The gas spring brackets that are bolted to the frame should always be packed up if there is a gap behind them. This only applies if the brackets are protruding past the frame into the structural hole.
5. When cover is fixed into position, try opening the lid via square 'Tee' key, handle or any device that you have requested to be fitted.
6. One person should easily open the lid without any real effort applied.
7. There is a lip incorporated into the frame for use of flashing and making water tight seal if required.

